


# Instruction Manual

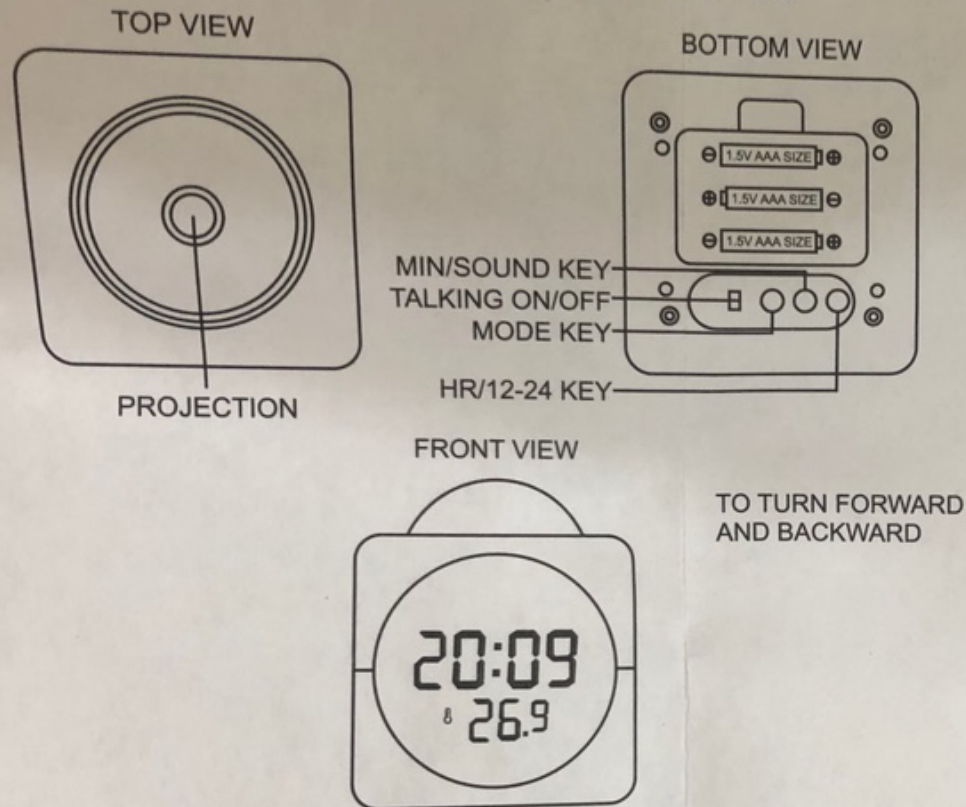

## Functions

1. LCD time display
2. Alarm and 10 minute snooze function
3. Talking: report current time
4. Blue backlight
5. CHIME1: every hour; CHIME2: only from 7:00am to 9:00am
6. Multi alarm sounds
7. Projection show time

## Operation

### 1. Battery installation

Remove the battery compartment door and insert 3 "AAA" size batteries into the battery compartment.

### 2. Under any mode, press top button to tell the time with backlight and projection on for about 10 seconds

### 3. Under normal mode, press MODE key to enter into the following modes respectively.

Normal → time setting → alarm setting → ALM, CHM on/off switch.  
Under time setting mode, press MIN/SOUND key to adjust minutes.  
Press HR key to adjust hours.

### 4. Alarm time setting

Under normal display, press MODE key twice to enter into the alarm setting mode, then press MIN/SOUND key to adjust minutes, Press HR to adjust hours.

### 5. ALM and CHM on/off switch

Under normal mode, press MODE key three times to enter into the ALM and CHM setting mode, then press MIN/SOUND key to turn on/off the alarm function. If the alarm function is open, icon will display. Press HR key to turn on/off CHIME function. The following setting modest will display respectively:

CHM1 ON → CHM2 ON → CHM OFF

When CHM1 function is on, icon will display. When CHM2 function is open, icon will display.

### 6. Under normal display, press MIN/SOUND key to choose the alarm sounds. Press HR/12-24 key to switch 12HR/24HR time mode. Press the key 2 seconds to switch °C/°F.